


1 YEAR
WARRANTY



Ω OMEGA® **User's Guide**

***Shop online at
omega.com®***

***e-mail: info@omega.com
For latest product manuals:
omegamanual.info***

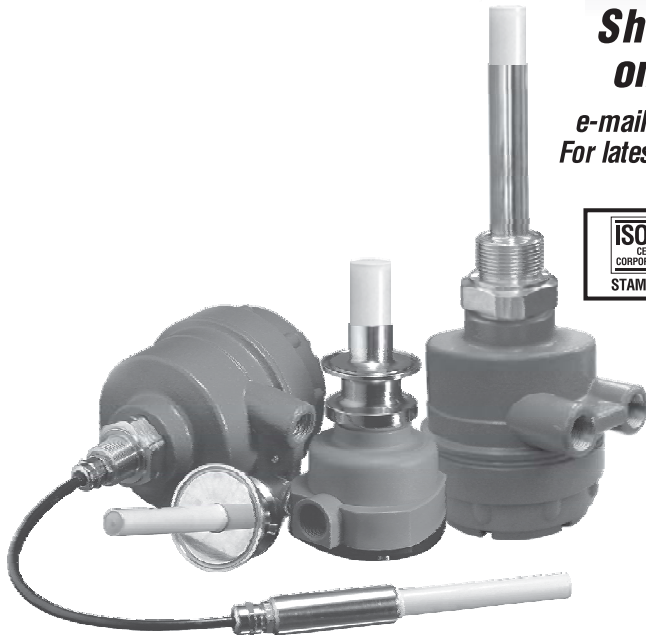

LVCN6000/7000 Series Capacitive Point Level Detection



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047
Toll-Free: 1-800-826-6342 Tel: (203) 359-1660
FAX: (203) 359-7700 e-mail: info@omega.com

Canada:
976 Bergar
Laval (Quebec), H7L 5A1 Canada
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928
FAX: (514) 856-6886 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA ®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN ®

Mexico Latin America En Español: 001 (203) 359-7803 FAX: 001 (203) 359-7807
info@omega.com.mx e-mail: espanol@omega.com

Servicing Europe:

Benelux: Managed by the United Kingdom Office
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21
FAX: +31 20 643 46 43 e-mail: sales@omegashop.nl

Czech Republic: Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342 TEL: +420-59-6311899
FAX: +420-59-6311114 e-mail: info@omegashop.cz

France: Managed by the United Kingdom Office
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0800 6397678 TEL: +49 (0) 7056 9398-0
FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

United Kingdom: OMEGA Engineering Ltd.
ISO 9001 Certified One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD United Kingdom
Toll-Free: 0800-488-488 TEL: +44 (0) 161 777-6611
FAX: +44 (0) 161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.
WARNING: These products are not designed for use in, and should not be used for, human applications.

Contents

Introduction	4
Models & Dimensions	5
Wiring Diagram	6
Relay Status Guide	7
Installation	8
Calibration	10
Handling	11
Technical Specifications	12
Trouble Shooting	14
Warranty & Disclaimer	15

LVCN6000/7000 Capacitive Point Level Detection



The LVCN Series are capacitance switches ideal for High/Low level detection for liquid, solids, granular materials and pastes. These units can also detect level without being in contact with the product through a sight glass. Unlike other capacitance probes, the LVCN6000/7000 can detect conductive, non-conductive or low dielectric materials with extremely accurate performance without requiring an external reference or installation in a metal vessel.

Both models can be made with cable or rod rigid stainless steel giving more flexibility to complex applications.

Technology


The sensor operates in a manner that is similar to a simple capacitor. A high frequency oscillator is located within the tip of the probe. When the tip of the probe comes in contact with the medium, the frequency of the oscillation reaches a preset point and the detection circuit signals the switch to change state.

Features


- No Moving Parts – Rugged Construction
- Highly customizable:
 - POM (Polyoxymethylene), PTFE or PVC Sensing Tip
 - Extended Lengths with both Rigid 316 rod or Cable
 - Threaded, Flange or Sanitary Process Connections
- Available in DC or Universal Power Supply versions
- Almost completely immune from build-up, coating media aggressive products
- Easily applied in a wide range of applications/industries such as: water, oils, corrosives, solids, powders, grains, conductive as well as non-conductive medias.

Models and Dimensions

Housing Options

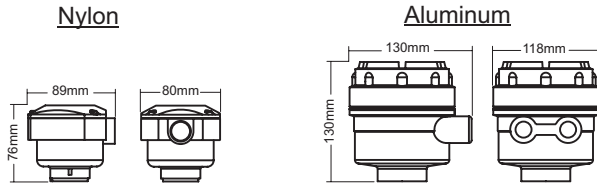

Mounting Options for LVCN6000/7000

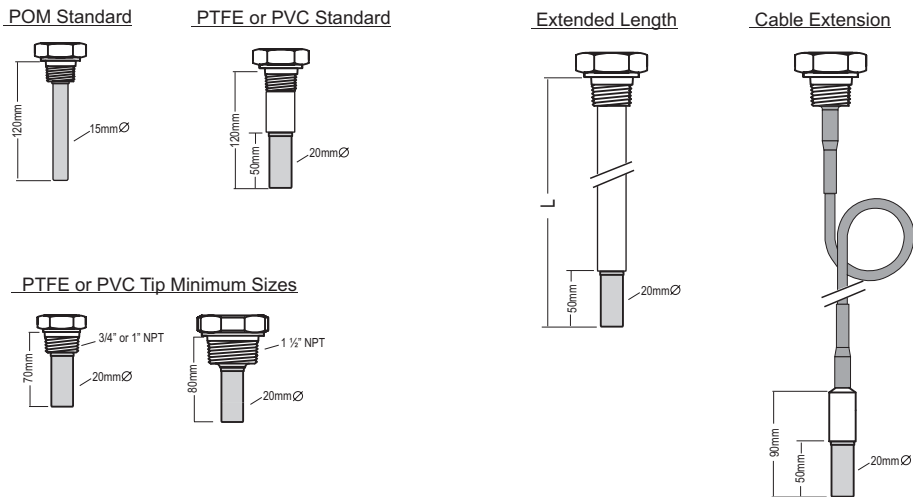


Process Connections

Threaded Connections		Tri-Clamp Connection		Flange Connections <small>ANSI 150# ANSI 300#</small>	
3/4"		1 1/2"		1"	FF
1"		2"		1 1/2"	
1 1/2"		2 1/2"		2"	RF
2"		3"		2 1/2"	


Wiring Diagram

- L1 - Power ON (Green)
- L2 - Output Status (Red)
- L3 - Sensor Status (Delay) Yellow
- P1 - Sensibility Adjustment
- P2 - Time Delay Adjustment

LVCN7000 Nylon Housing

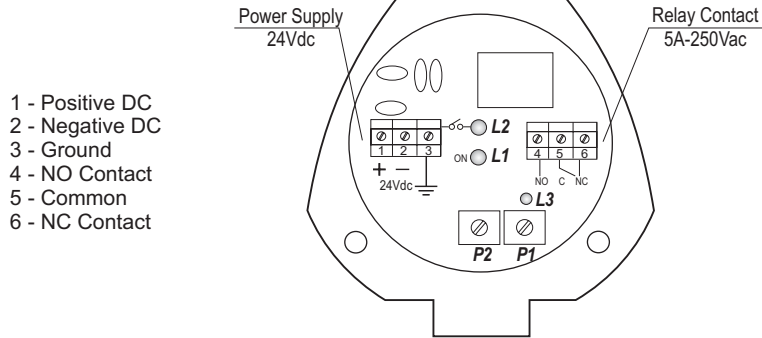



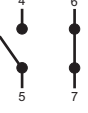


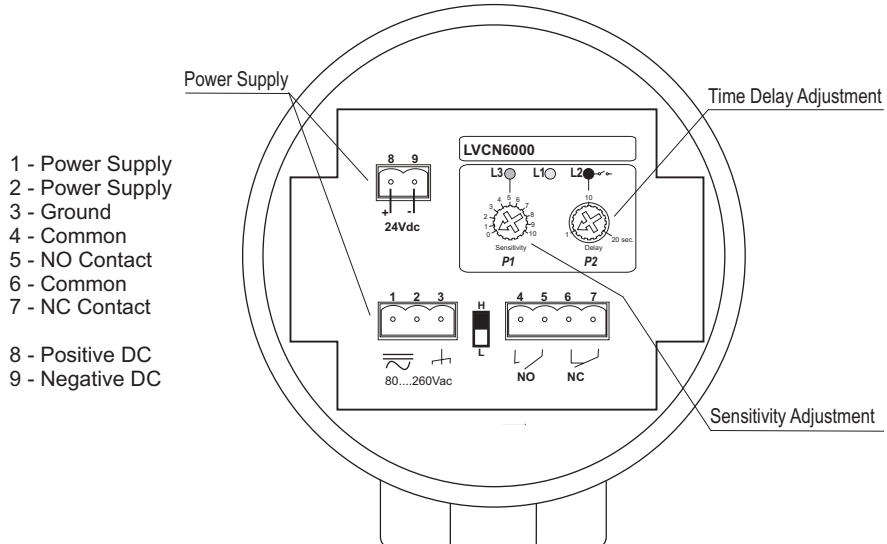

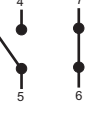


LVCN6000 Aluminum Housing





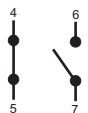

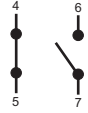Relay Status Guide

LVCN6000

Switch Position	Level	NO - NC	Green LED	Yellow LED	Red LED
 Maximum fail-safe	 Probe covered		ON	ON	ON
	 Probe uncovered		ON	OFF	OFF
 Minimum fail-safe	 Probe covered		ON	ON	OFF
	 Probe uncovered		ON	OFF	ON

LVCN7000

Level	SPDT	Green LED	Yellow LED	Red LED
 Probe uncovered		ON	OFF	OFF
 Probe covered		ON	ON	ON

Installation

Installation

Verify that the location the probe is to be mounted is clear from the stream of product (Fig. 1).



When installing more than one probe in your process, verify that they are separated by a minimum distance of 500mm (Fig. 1).

Material falling onto the probe can cause damage or switching errors. If this is unavoidable, it is recommended that a protective shield be installed above the probe to protect it. The shield is also recommended when the probe is used for a low level switch or in the outflow of the product (Fig. 2).

The tip of the probe should slightly point downward (when possible) so that if there are any excess of product it will easily slide from the probe (Fig. 2).

When installing from the top of the tank confirm that the tip of the probe has cleared the side of the vessel at least 500mm (Fig. 3).

When installing the sensor directly to the tank make sure that the rod extends beyond the inner wall of the tank, by as much as possible, so that internal build up or other debris does not interfere with the sensor's performance (Fig. 2 correct Fig. 4 incorrect).

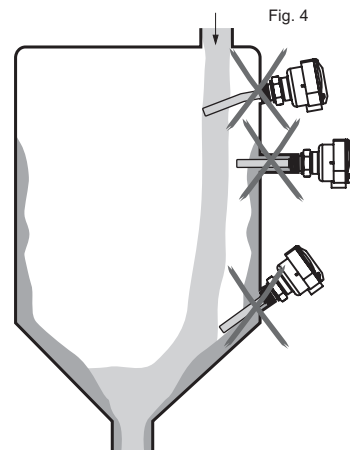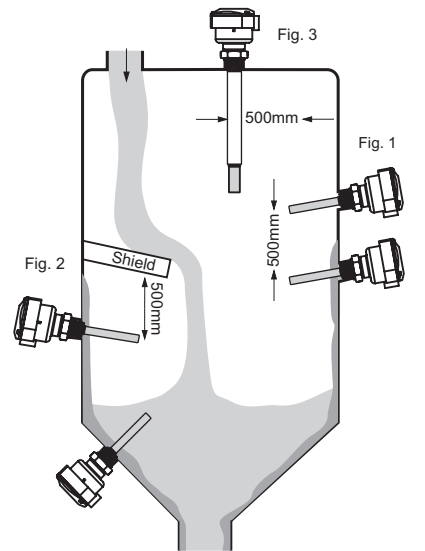

Installation

For probes with cable extensions, installation should be from the top of the tank. It is also recommended that for these probes the process shouldn't have any agitation as this can cause fluctuating readings or damage to the probe (Fig. 5).

The LVCN with rigid rod is recommended for applications that have turbulence or vortices throughout use (Fig.6).

Ensure that the conduit is facing downward to avoid water from entering the housing (Fig. 7).

Before installing the probe, ensure that the available power supply is correct.




Verify that the probe has been wired as per the instructions on page 7.

Verify that the operating pressure and temperature of the process corresponds to the operating parameters of the probe.

The probe must be installed utilizing the type of connection provided.

Caution:

The Capacitance Probes Series will not work properly in viscous, coating mediums with high salt content (high di-electric), especially when mounting from the side of the vessel. Sitron does not recommend using this product in this type of application unless otherwise specified.

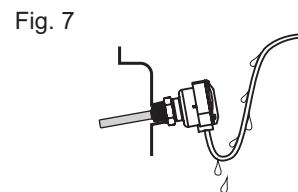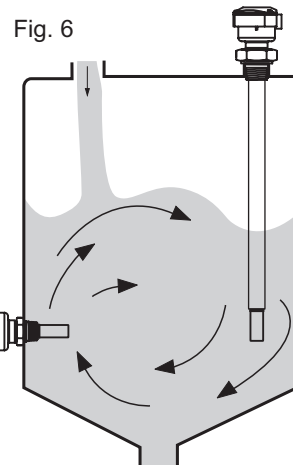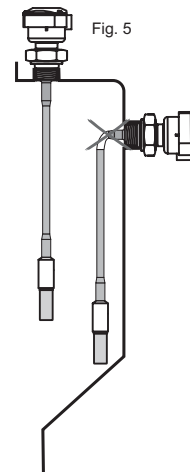

Calibration

1. Turn both potentiometers (P1 and P2) fully counterclockwise before you begin (Fig. 1).

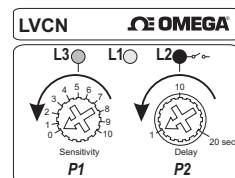


Fig.1

2. Install the probe and power it on. The L1 green LED should be on.

3. With the vessel empty (or the medium not in contact with the sensor), turn the sensibility potentiometer (P1) clockwise until the yellow LED (L3) turns On. Mark that location on the electronics' label using a pencil. If this LED (L3) does not turn on, mark the maximum position on the label with a pencil (Fig. 2).

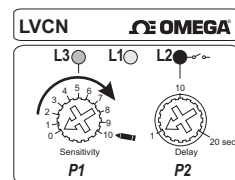


Fig.2

4. Fill the vessel until the medium is in contact with the sensor.

5. Turn the potentiometer (P1) counter-clockwise until the yellow LED (L1) turns Off. Mark the location where the yellow LED shuts off on the electronics' sticker using a pen or pencil. If the LED does not turn Off, leave the potentiometer completely turned counter-clockwise (Fig. 3).

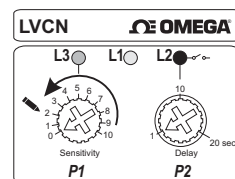


Fig.3

6. Now that you have marked minimum and maximum settings for your particular application, turn the sensibility potentiometer (P1) clockwise half way between the two pencil marks. This point should be the ideal setting where the probe is neither too sensitive or not sensitive enough. This method of calibration should also prevent false alarms.

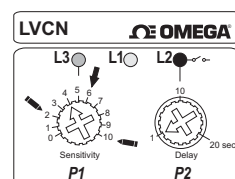



Fig.4

Delay


Adjust the delay time from 0,1 to 20 seconds by setting potentiometer P2.

Probes:


Seal the thread with Teflon tape before installation (Fig. 1).

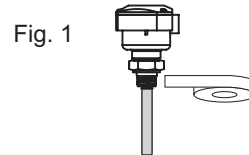


Do not turn or handle by the housing when tightening the process connection. However, the housing is suitable to be reoriented by once the process connection has been tightened.(Fig. 2).

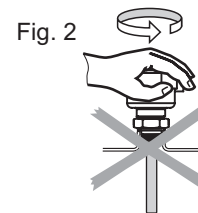


Use the correct tool during installation (Fig. 3)

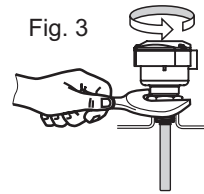

The probe should not be dropped or suffer any impact or fall that could damage the electronics or the plastic tip of the probe (Fig. 4 and 5).

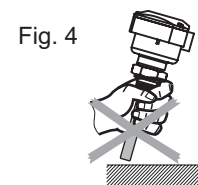


Periodic visual inspection of the probe is required to check for corrosion or deposit build-up. If deposits are found, clean the sensor to ensure optimum performance.

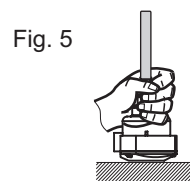

When cleaning the rod use a soft brush or any other similar object.

Technical Specifications


LVCN7000

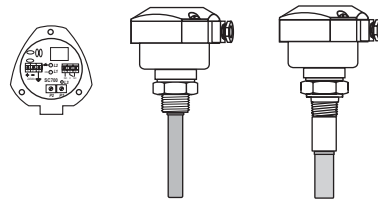

Application	Level switch for liquids solids and granular
Operating Voltage	24 Vdc +/- 10%
Current Consumption	2VA
Output	Relay (SPDT) 5A max (250Vac)
Adjustment	Potentiometer - Switch Point
Time Delay	Potentiometer 1 to 20 seconds
Frequency oscilation	5MHz
Level indication	Led status on/off
Electrical Connection	Cable gland - 1/2"NPT cond. entry or M12 connector
Process Connection	3/4" to 1 1/2" BSP or NPT flange or sanitary connections
Wetted Material	POM (Polyoxymethylene), PTFE or PVC
Enclosure Material	Glass filled nylon
Max pressure	145 PSI (10 Bar)
Operating Temperature	14 to 176° F (-10 to 80°C)
Class Protection	IP 65

Technical Specifications

LVCN6000

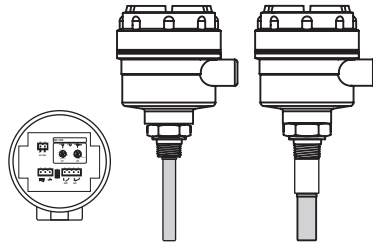

Application	Level switch for liquids solids and granular
Operating Voltage	85...230 Vac 24 Vdc
Current Consumption	4VA
Output	Relay (NO + NC) 5A max (250Vac)
Adjustment	Potentiometer - Switch Point
Time Delay	Potentiometer 1 to 20 seconds
Frequency oscilation	5MHz
Level indication	Led status on/off
Electrical Connection	Cable gland - ½"NPT cond. entry or M12 connector
Process Connection	¾" to 1 ½" BSP or NPT flange or sanitary connections
Wetted Material	POM (Polyoxymethylene), PTFE or PVC
Enclosure Material	Glass filled nylon, Aluminium
Max pressure	145 PSI (10 Bar)
Operating Temperature	14 to 176° F (-10 to 80°C)
Class Protection	IP 65

Trouble Shooting

Fault	Cause	Solution
Doesn't Power Up	Green LED Off No power	Verify current supply
	Bad contact	Verify cable connection
Doesn't Detect Medium	Low sensibility	Adjust sensibility trimpot
Always On	Build up on the sensor	Clean sensor then adjust sensibility

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, impropo interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/ DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2012 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

**Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA...Of Course!
*Shop online at omega.comSM***

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Data Logging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

**ENVIRONMENTAL
MONITORING AND CONTROL**

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

M-5188/1012